

OVERVIEW



Master key

* Button cell CR2032 not included.

FEATURES



Tactile buttons and indicators sound for a premium experience



For shared use (public)



Automatic alarm after 4 attempts



Low consumption of battery (more than 5,000 uses)




4 digit combination for 10,000 possibilities



Easy button cell battery change

[See the E2 lock guide here](#)
[See the instruction videos of the E1 lock](#)

USER GUIDE - E2

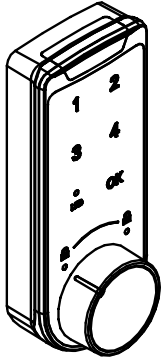

PROGRAM A CODE

LOCK :


- Enter a 4-digit code and turn lock button to lock.
- Memorize this code.
- This code will be valid for one use only.

UNLOCK :

- Enter this 4 digit code again and turn lock button to unlock.
Do NOT press OK.

* If a mistake is made while entering the code, press OK to cancel and enter the code from the beginning.

* If the code is entered incorrectly 4 times in a row, a 20 second continuous alarm will sound. Enter the correct code to silence the alarm.

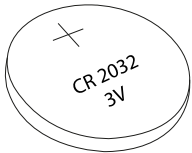

BATTERY CHANGE

- If the lock produces 3 beeps after unlocking, the battery needs to be replaced.
- Pull the battery case up and replace the battery. Use a button cell CR2032 (not included).

* The sound of the 3 beeps indicates that the battery will stay active for approximately 200 more uses.



FORGOTTEN CODE

- Note the serial number located on the side of the lock.
- Contact Logiflex to obtain the master code for your lock.
- Enter the 8-digit master code and press OK.
- Turn the lock to open.



FORGOTTEN CODE - WITH MASTER KEY

- Contact the person in charge of the master key.
- Insert the key and press OK.
- Turn the lock to open.